




Eco-Friendly Series DIC Band Pla-Core

A new alternative to paper cores
Solves the problem of disposing of paper cores after band use.
Supports zero-emission initiatives and green purchasing for companies and users working toward the SDGs.

Features of DIC Band Pla-Core

- Collected and reused after use.
- Can be easily disassembled by sliding.
- Made of polypropylene with excellent durability.
- Compatible with your existing strapping machines.

Reusing DIC Band Pla-Core

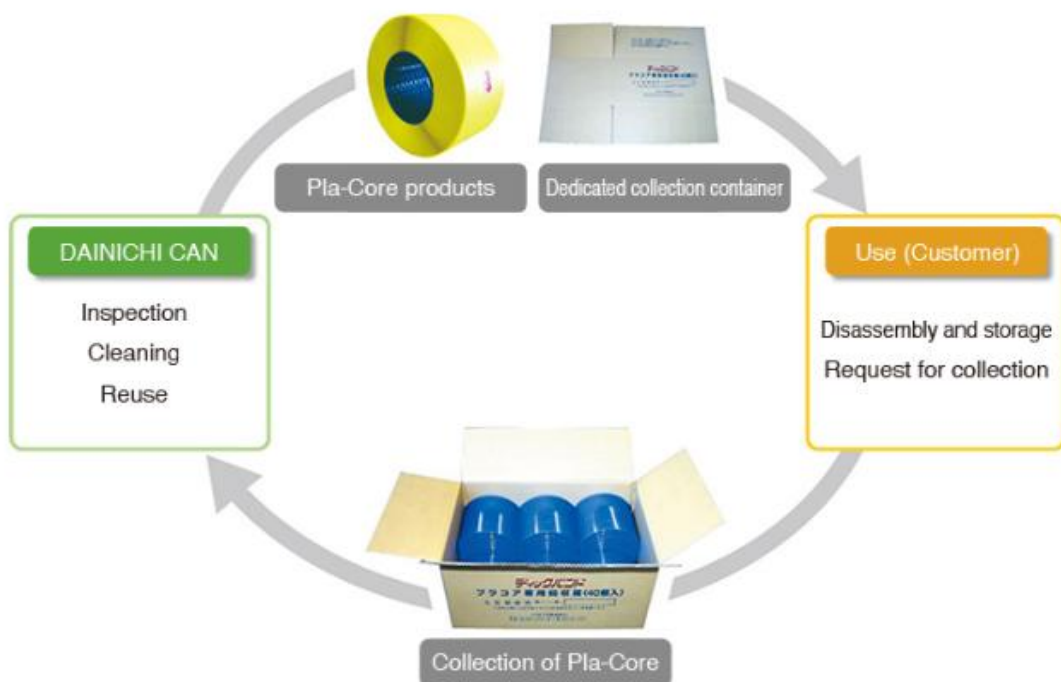

How to Disassemble the DIC Band Pla-Core

1



Hold the Pla-Core with both hands in the direction where the through-holes on the left and right of the joint are located.

2



Slide it in the direction of the release arrow.

3



Open the Pla-Core to the left and right.

4



Place the Pla-Cores in two rows in the dedicated collection box with the outer surface facing upward.
Up to 40 pieces can be stored.

[Notes]

When disassembling, be sure to hold the Pla-Core in the direction of the through-holes and slide it accordingly. Sliding while holding the opposite side may cause injury due to the protrusions on the joint.

*Compatible with various types of DIC bands. For details, please contact us.